

How to change channels instantly using your remote.

Because nTelos Video is digitally delivered over high-speed Internet, you'll get the channel instantly (no lag time!) if you press the **number/letter** buttons on the remote, then press **ENTER** or **OK**.

The new channel should appear almost instantly. If the channel doesn't change, you may be trying to tune to a channel that you don't receive.

Scroll through the channels to see full-screen programs.

To move up or down one channel at a time, press + or - on the remote's **CH/PG** button. Hold down the **CH/PG** button to scroll continuously through the channels. You'll see the channel number and show title at the bottom of the TV screen.

To return to the channel you were watching previously, press **LAST**.

Picture-in-picture browsing lets you see what else is on.

- > For a quick look at what's playing on another channel without leaving your current program, press the **up/down arrows**.
- > The *Browse Bar* will appear containing program title, time elapsed, and live picture-in-picture (PIP) video for each channel you scroll through.
- > To see what's coming up on the channel you're watching, press the **right arrow**.
- > To view information about the program in the browse bar, press **INFO**.
- > To tune directly to the program you see in the *Browse Bar*, press **OK**. (The *Program Info* screen will appear if the program is not currently playing.)


The *Browse Bar* will disappear after 10 seconds of inactivity. Press one of the **arrows** to bring it back up again.



Find channels using the interactive guide.

The *Guide* is the place to go to view a directory of current and future programs with their corresponding channels to watch, rent, or schedule to record.

- > Press **GUIDE** on the remote (or press **MENU** and select *Live TV*, then *Guide*).
- > Use **up/down arrows** to scroll channel listings, **CH/PG** to scroll pages, and **left/right arrows** to see program start times.

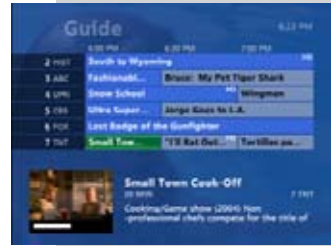

To advance the *Guide* by 24 hours, press **FF** once. Press **FF** twice to advance 48 hours, and so on.

- > A PIP image of programs that are currently playing will appear at the bottom of the *Guide* screen.
- > Press **OK** to begin watching the selected program. If the program is not currently on, a *Program Info* screen will appear instead.
- > To record a program from the *Guide*, highlight it and press **RECORD**. Learn more about recording programs on p. 16.

Hiding channels from the lineup.

You can remove channels that you don't want to see in your *Guide* or when browsing channels. You can still tune to them anytime using the **number/letter** buttons on your remote.

- > To hide channels, press **MENU**, then scroll across the header to **Settings**. Select *Television* and press **OK**.
- > Select *Customize channels*; press **OK**
- > Use **up/down arrows** to scroll through the list of available channels. Press **OK** to uncheck (hide) or check (view) channels.
- > When you're finished, select *Save* and press **OK**. Remember, you can tune to hidden channels anytime using the **number/letter** buttons.



What's a PIP?

A small onscreen picture in a picture (PIP) of the channels you're browsing while watching a show. Seeing the actual show helps you decide faster if you want to switch, especially when you aren't familiar with its title or the channel.