

Create a program guide with only your favorite channels.

Don't want to look through every listing? Set up your own *favorites* interactive program guide:

- > Press **MENU** and under the *Settings* heading, select *Television*: press **OK**.
- > Select *Favorite channels* list, and press **OK**. The *Favorite channels* settings screen displays all available channels.



- > Use **up/down arrows** to scroll the list.
- > Press **OK** to check and uncheck channels (A check mark adds it to your favorites).
- > To clear your *Favorite channels* list, select *Uncheck all* and press **OK**.
- > Select *View checked* and press **OK** to show channels you've checked. Select *View all* to show the entire list.
- > When you are finished modifying the list, select *Save*, and then press **OK**.
- > To view your favorites the list, press **MENU** then highlight and select *Favorites*.

Use Search to find favorite channels.

To quickly find what you're looking for, start typing letters in the *Search* screen to see a list of programs and people.

- > To bring up the *Search* screen, press **MENU** and under *Live TV* select *Search*, then press **OK**.
- > To narrow your search to only program titles or an actor or director, choose *Options* at the bottom of the key pad.


Search by title.

- > Use **arrows** to navigate to *Options* on the onscreen keyboard, and press **OK**. Then select *Titles*, and press **OK**.
- > Use **arrows** to locate the title's letters within the onscreen keyboard. Pressing **OK** selects the highlighted letter .

A short primer on entering letters in your remote.

Using the **number** buttons, press 2 three times to type the letter C. To type the number 2, press 2 four times (A, B, C, 2). Use **DELETE**, **SPACE** and **ENTER** buttons to edit text.

- > The *Search* screen will begin to show results as you type. The more letters you enter, the more specific the results will be.
- > Press the **right arrow** repeatedly to tab over to the results list and highlight the desired program. If “more...” appears next to a title, the search has returned more than one program. Press **OK** to view the individual programs.

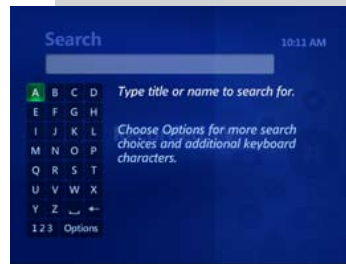

You can also type the letters directly by using the remote's **number/letter** buttons. If the next letter is on the button you just pressed, wait for the cursor to move to the next letter position before pressing. To return to the channel you were watching previously, press **LAST**.

Search by person.

- > To find programs by actor or director, use **arrows** to navigate to *Options* on the *Search* screen, and press **OK**. Select *People*, and press **OK**.
- > Enter a first or last name using the **arrow** and **OK** buttons. (Refer to “Search by Title” on page 14).
- > Names appear as you type, with results sorted by program title. Highlight the name and press **OK** for sorting options. In addition to *By title* in the header, you can also choose to sort *By date*, or list only videos you’ve previously rented that feature that person when you select *By rental*.

Once you’ve found a program.

- > Select the program using the **up/down arrows** from the *Results* list.
- > Press **OK** to immediately begin watching a program that is currently playing.
- > Press **INFO** to get more information about the selected program. You can schedule to record it from this screen.
- > If you’ve selected a Video On Demand program, press **INFO**, then select *Rent* to order your chosen program.

Catch up on an episode of your favorite premium channel series.

If you have a movie package like HBO, you can watch on-demand videos of many past shows. Learn more on p. 22.