

See what's on, search for programs, and stretch to widescreen with one click.


Most of the buttons on your nTelos Video remote work as you would expect. The **VOL** button controls volume, the **MUTE** button silences the sound, and the **CH/PG** button changes the channel. The **number/letter** buttons not only find channels, but you can also use them to enter program titles or actors' names to search for TV programs.

- > Press **GUIDE** to open or close the interactive program guide, which lists the shows that are on now and for the next seven days.
- > Press **LAST** to return to the most recently viewed channel.
- > Press **SPACE** when you've finished one word and want to start another.
- > Press **DELETE** to delete the last character typed in a text field.
- > Press **ENTER** to affect zoom when you are in widescreen mode.



Battery requirements for your remote.

Two alkaline AA batteries are required for the proper functioning of this remote. To change batteries, press the battery cover tab on the back of the remote and remove the cover. Insert the new batteries by matching up the + and - symbols on the batteries with those on the diagrams inside the battery compartment. Replace the cover and test the remote by pressing any key. The red LED light will flash if the batteries are inserted properly.

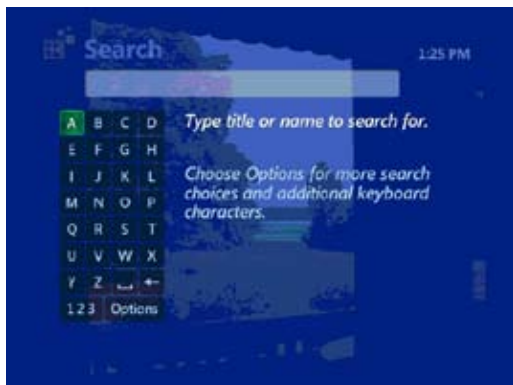

Program Info Quick Tips

- > Press **MENU** on your remote, then select *Live TV* then *Search* to bring up the Search screen.
- > Use the **arrows** to select *Options* from the onscreen keyboard, press **OK**, then select *Titles*, and press **OK**.
- > Use **arrows** to highlight letters onscreen then press **OK** to enter the letter.
- > The *Search* screen will show results as you type. Press the **right arrow** repeatedly to highlight programs in the results list, and use the **up/down arrows** to scroll.
- > Press **OK** to begin watching a program.
- > Press **INFO** to get information about a program.
- > Press **RECORD** to record the program.
- > Press **INFO** and then select *Rent* to order a Video On Demand program.



Search by Person Quick Tips

- Select *Options* from the *Search* screen, press **OK**, then select *People* from the options, and press **OK**.
- > Type in a first or last name using the remote's **arrow/OK** buttons. A list of names appears alphabetically as you type. Use the **right arrow** to highlight a name in the list and press **OK**. A list of programs associated with that name will appear.

Search on Demand Quick Tips

- > Select *Options* from the *Search* screen, press **OK**, then select *Video On Demand* from the options, and press **OK**.
- > Enter a title or a name using the **arrow/OK** buttons. press the **right arrow** repeatedly to tab over to the results.

Already know the name of the show or the person you want to find?

You can type it directly into the on-screen search field.